
SMOKE DETECTORS

SMOKE DETECTORS IN EACH SLEEPING ROOM

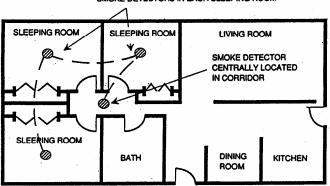


LOCATION OF SMOKE DETECTORS WITHIN A RESIDENCE


In new construction, when more than one smoke detector is required to be installed within an individual dwelling, the detectors shall be interconnected in such a manner that the actuation of one alarm will actuate all of the alarms in the dwelling. Smoke alarms in additions and remodels are to be interconnected to alarms in the existing when the wiring for such alarms is exposed in the construction / remodel, or when otherwise accessible through an attic, crawl space, or basement.

KITCHEN GFCI

BATHROOM PLUGS

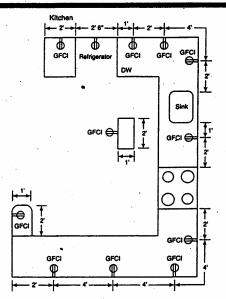

All kitchen counter top electrical receptacles are to be GFCI protected. (NEC \$210-8a #6) At least one electrical receptacle is to be located on each island or peninsular counter. (NEC \$210-52c)

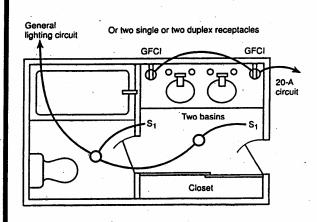

At least one electrical receptacle shall be provided adjacent to the lavatory is each bathroom. This receptacle is to be supplied by a 20 amp branch circuit which has no other receptacles. More than one bathroom receptacle may be connected to this dedicated circuit. (NEC §210-52d) These electrical receptacles are required to be GFCI protected: (NEC §210-8a #1)



PLACER COUNTY
BUILDING DEPARTMENT
CALIFORNIA

2001 CALIFORNIA ELECTRICAL CODE & PLACER COUNTY CODE Art 15:04:050 K.

DATE: NOVEMBER 1, 2002